

DS1307 - Arduino library support for the DS1307 I2C Real-Time Clock

Copyright (C)2010 Henning Karlsen. All right reserved

You can find the latest version of the library at <http://www.henningkarlsen.com/electronics>

This library has been made to easily interface and use the DS1307 RTC with the Arduino without needing the Wire library.

If you make any modifications or improvements to the code, I would appreciate that you share the code with me so that I might include it in the next release. I can be contacted through <http://www.henningkarlsen.com/electronics/contact.php>

This library is free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2.1 of the License, or (at your option) any later version.

This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.

You should have received a copy of the GNU Lesser General Public License along with this library; if not, write to the Free Software Foundation, Inc., 51 Franklin St, Fifth Floor, Boston, MA 02110-1301 USA

Version:	1.0	4 Oct 2010	initial release
	1.1	26 Jan 2012	Added support for Arduino 1.0 IDE

Structures:

Time;	
Structure to manipulate time- and date-data.	
Variables:	hour, min, sec: For holding time-data date, mon, year: For holding date-data dow: Day-of-the-week with monday being the first day
Usage:	Time t; // Define a structure named t of the Time-class

DS1307_RAM;	
Buffer for use with readBuffer() and writeBuffer().	
Variables:	Cell[0-56]: Byte-array to hold the data read from or to be written to the on-chip RAM.
Usage:	DS1307_RAM ramBuffer; // Declare a buffer for use

Defined Literals:

Weekdays	
For use with setDOW() and Time.dow	
	MONDAY: 1 TUESDAY: 2 WEDNESDAY: 3 THURSDAY: 4 FRIDAY: 5 SATURDAY: 6 SUNDAY: 7

Select length	
For use with getTimeStr(), getDateStr(), getDOWStr() and getMonthStr()	
	FORMAT_SHORT: 1 FORMAT_LONG: 2

Select date format	
For use with getDateStr()	
	FORMAT_LITTLEENDIAN: 1 FORMAT_BIGENDIAN: 2 FORMAT_MIDDLEENDIAN: 3

Select Square Wave Output rate	
For use with setSQWRate()	
	SQW_RATE_1: 0 SQW_RATE_4K: 1 SQW_RATE_8K: 2 SQW_RATE_32K: 3

Functions:

DS1307(SDA, SCL);	
The main class of the interface.	
Parameters:	SDA: Arduino pin connected to the SDA-pin of the DS1307 (Pin 5, Serial Data) SCL: Arduino pin connected to the SCL-pin of the DS1307 (Pin 6, Serial Clock)
Usage:	DS1307 rtc(2, 3); // Start an instance of the DS1307 class
getTime();	
Get current data from the DS1307.	
Parameters:	None
Returns:	Time-structure
Usage:	t = rtc.getTime(); // Read current time and date.
setTime(hour, min, sec);	
Set the time.	
Parameters:	hour: Hour to store in the DS1307 (0-23) min: Minute to store in the DS1307 (0-59) sec: Second to store in the DS1307 (0-59)
Returns:	Nothing
Usage:	rtc.setTime(23, 59, 59); // Set the time to 23:59:59
Notes:	Setting the time will clear the CH (Clock Halt) flag. See the datasheet for more information on the CH flag.
setDate(date, mon, year);	
Set the date.	
Parameters:	date: Date of the month to store in the DS1307 (1-31) *1 mon: Month to store in the DS1307 (1-12) year: Year to store in the DS1307 (2000-2099)
Returns:	Nothing
Usage:	rtc.setDate(4, 10, 2010); // Set the date to October 4., 2010.
Notes:	*1: No cheking for illegal dates so Feb 31. is possible to input. <i>The effect of doing this is unknown.</i>
setDOW(dow);	
Set the day-of-the-week.	
Parameters:	dow: Day of the week to store in the DS1307 (1-7) *1
Returns:	Nothing
Usage:	rtc.setDOW(FRIDAY); // Set the day-of-the-week to be friday
Notes:	*1: Monday is 1, and through to sunday being 7.
getTimeStr([format]);	
Get current time as a string.	
Parameters:	format: <Optional> FORMAT_LONG "hh:mm:ss" (default) FORMAT_SHORT "hh:mm"
Returns:	String containing the current time with or without seconds.
Usage:	Serial.print(rtc.getTimeStr()); // Send the current time over a serial connection
getDateStr([sformat[, eformat[, divider]]]);	
Get current date as a string.	
Parameters:	sformat: <Optional> *1 FORMAT_LONG Year with 4 digits (yyyy) (default) FORMAT_SHORT Year with 2 digits (yy) eformat: <Optional> *2 FORMAT_LITTLEENDIAN "dd.mm.yyyy" (default) FORMAT_BIGENDIAN "yyyy.mm.dd" FORMAT_MIDDLEENDIAN "mm.dd.yyyy" divider: <Optional> Single character to use as divider. Default is '.'
Returns:	String containing the current date in the specified format.
Usage:	Serial.print(rtc.getDateStr()); // Send the current date over a serial connection (in Little-Endian format)
Notes:	*1: Required if you need eformat or divider. *2: Required if you need divider. More information on Wikipedia (http://en.wikipedia.org/wiki/Date_format#Date_format).

getDOWStr([format]);

Get current day-of-the-week as a string.

Parameters: format: **<Optional>**
 FORMAT_LONG Day-of-the-week in English (default)
 FORMAT_SHORT Abbreviated Day-of-the-week in English (3 letters)
 Returns: String containing the current day-of-the-week in full or abbreviated format.
 Usage: Serial.print(rtc.getDOWStr(FORMAT_SHORT)); // Send the current day in abbreviated format over a serial connection

getMonthStr([format]);

Get current month as a string.

Parameters: format: **<Optional>**
 FORMAT_LONG Month in English (default)
 FORMAT_SHORT Abbreviated month in English (3 letters)
 Returns: String containing the current month in full or abbreviated format.
 Usage: Serial.print(rtc.getMonthStr()); // Send the current month over a serial connection

halt(value);

Set or clear the CH¹ flag.

Parameters: value: true: Set the CH flag
 false: Clear the CH flag
 Returns: Nothing
 Usage: rtc.halt(true); // Set the CH flag
 Notes: *1: CH: Clock Halt flag. See the datasheet for more information.

writeBuffer(buffer);

Burst-write the buffer to on-chip RAM.

Parameters: buffer: DS1307_RAM buffer
 Returns: Nothing
 Usage: rtc.writebuffer(ramBuffer); // Write the 56 bytes of ramBuffer to the on-chip RAM

readBuffer();

Burst-read the on-chip RAM to the buffer.

Parameters: None
 Returns: DS1307_RAM buffer
 Usage: ramBuffer=rtc.readBuffer(); // Read all 56 bytes of on-chip RAM and store the in ramBuffer

poke(address, value);

Write one single byte to on-chip RAM.

Parameters: address: address of byte to write (0-55)
 value : value to write to <address> (0-255)
 Returns: Nothing
 Usage: rtc.poke(15, 160); // Write 160 to address 15

peek(address);

Read one single byte from on-chip RAM.

Parameters: address: address of byte to read (0-55)
 Returns: Byte containing data read from on-chip RAM
 Usage: b=rtc.peek(18); // Read a single byte from address 18 and put the result in b

setOutput(enable);

Set the SQW/OUT pin (pin 7) on the DS1307 to HIGH or LOW. This command has no effect if enableSQW() has been set to TRUE.

Parameters: enable: TRUE sets the output to HIGH, and FALSE sets it to LOW.
 Returns: Nothing
 Usage: rtc.setOutput(true); // Set SQW/OUT to HIGH

enableSQW(enable);

Enable or disable Square Wave output on the SQW/OUT pin (pin 7).

Parameters: enable: TRUE enables Square Wave output, and FALSE disables it.
 Returns: Nothing
 Usage: rtc.enableSQW(true); // Enable Square Wave output on SQW/OUT

`setSQWRate(rate);`

Set the Square Wave output rate.

Parameters: rate: SQW_RATE_1 sets a 1Hz rate
 SQW_RATE_4K sets a 4.096KHz rate
 SQW_RATE_8K sets a 8.192KHz rate
 SQW_RATE_32K sets a 32.768KHz rate

Returns: Nothing

Usage: `rtc.setSQWRate(SQW_RATE_1); // Sets the rate for SQW to 1 Hz`